

Service scope B

Service scope B

| | fortwo cabrio | fortwo cabrio BRABUS | fortwo coupé | fortwo coupé BRABUS | roadster | roadster-coupé | roadster BRABUS | forfour |
|--|---------------|----------------------|--------------|---------------------|----------|----------------|-----------------|---------|
| Vehicle diagnosis | | | | | | | | |
| Carry out short test with diagnosis test equipment | ● | ● | ● | ● | ● | ● | ● | ● |
| Reset maintenance interval display in instrument cluster | ● | ● | ● | ● | ● | ● | ● | ● |
| Check crash line for airbag | ● | ● | ● | ● | ● | ● | ● | - |
| Locking system | | | | | | | | |
| Check functioning of central locking system | ● | ● | ● | ● | ● | ● | ● | ● |
| Check functioning of electronic immobiliser | ● | ● | ● | ● | ● | ● | ● | - |
| Doors and soft top | | | | | | | | |
| Grease and oil hinges and locks of doors and flaps | ● | ● | ● | ● | ● | ● | ● | - |
| Grease and oil A-post strut bearing | - | - | - | - | ● | ● | ● | - |
| Check functioning and condition of electrical soft top | ● | ● | - | - | ● | ● | ● | - |
| Clean soft top guide | ● | ● | - | - | ● | ● | ● | - |

Service scope B

| | fortwo cabrio | fortwo cabrio BRABUS | fortwo coupé | fortwo coupé BRABUS | roadster | roadster-coupé | roadster BRABUS | forfour |
|--|---------------|----------------------|--------------|---------------------|----------|----------------|-----------------|---------|
| Passenger compartment | | | | | | | | |
| Check handbrake play | ● | ● | ● | ● | ● | ● | ● | ● |
| Check battery and fluid level, adjust | ● | ● | ● | ● | ● | ● | ● | - |
| Check condition of battery terminals as well as the connections for secure fit | ● | ● | ● | ● | ● | ● | ● | - |
| Check the feed line of the battery for proper routing and for chafe marks | ● | ● | ● | ● | ● | ● | ● | - |
| Check seat belts and belt buckles for external damage and proper functioning | ● | ● | ● | ● | ● | ● | ● | ● |
| Check seat rail and backrest of the front passenger seat for correct latching | ● | ● | ● | ● | ● | ● | ● | - |
| Check functioning of heater and ventilation | ● | ● | ● | ● | ● | ● | ● | ● |
| Check functioning of indicator lamps, symbol lighting and interior lights | ● | ● | ● | ● | ● | ● | ● | ● |
| Check functioning of horn | ● | ● | ● | ● | ● | ● | ● | ● |
| Check functioning of other electrical appliances | ● | ● | ● | ● | ● | ● | ● | ● |
| Lighting system | | | | | | | | |
| Check functioning of front, rear and side lighting | ● | ● | ● | ● | ● | ● | ● | ● |
| Check functioning of signal lights, hazard warning flashers and headlight flashers | ● | ● | ● | ● | ● | ● | ● | ● |
| Check headlight beam setting, adjust if necessary | ● | ● | ● | ● | ● | ● | ● | ● |
| Check functioning of headlight range adjustment | ● | ● | ● | ● | - | - | - | ● |

Service scope B

| | fortwo cabrio | fortwo cabrio BRABUS | fortwo coupé | fortwo coupé BRABUS | roadster | roadster-coupé | roadster BRABUS | forfour |
|--|----------------|----------------------|----------------|---------------------|----------------|----------------|-----------------|---------|
| Replace spark plugs (only in petrol engine). | ● ¹ | ● ² | ● ¹ | ● ² | ● ² | ● ² | ● ² | ● |
| Replace combination filter (with air conditioning only) | - | - | - | ● | ● | ● | ● | ● |
| Check battery and fluid level, adjust | - | - | - | - | - | - | - | ● |
| Check condition of battery terminals as well as the connections for secure fit | - | - | - | - | - | - | - | ● |
| Coolant system | | | | | | | | |
| Check engine cooling system for leaks | ● | ● | ● | ● | ● | ● | ● | ● |
| Check hoses for proper routing and for damage | ● | ● | ● | ● | ● | ● | ● | - |
| Transmission | | | | | | | | |
| Check transmission visually for damage and leaks | ● | ● | ● | ● | ● | ● | ● | ● |
| Check oil level in transmission, adjust if necessary | ● | ● | ● | ● | ● | ● | ● | ● |
| Check clutch actuator play. | ● | ● | ● | ● | ● | ● | ● | - |
| Check axle shaft sleeves for damage | ● | ● | ● | ● | ● | ● | ● | ● |
| Axles/underside of vehicle | | | | | | | | |
| Check underside of vehicle visually for damage | ● | ● | ● | ● | ● | ● | ● | ● |
| Check tie rod and drag link joints play, check rubber boots | ● | ● | ● | ● | ● | ● | ● | ● |
| Check rubber bearings and joints for damage | ● | ● | ● | ● | ● | ● | ● | ● |
| Check supporting joints | ● | ● | ● | ● | ● | ● | ● | - |

¹ additional service scope against separate invoice

² additional service scope against a separate invoice if there is a difference of more than 30,000 km from the last change

